


Instructions Maroon Chemical Free Stripping Pad



When you get started with the Maroon Chemical Free Stripping pad, your first choice is if you want to work either with or without water. Below, you will find a step-by-step instruction plan that shows you how to go about it. Enjoy using the Maroon Chemical Free Stripping pad!

General information Maroon Chemical Free Stripping Pad

- Suitable for use on an automatic scrubber and a Single disc machine with LOW revolutions (180 rpm).
- Suitable for marmoleum, linoleum, vinyl, marble, concrete floors. We recommend testing in a small inconspicuous area; this will help you decide on the number of passages the floor needs and what the effect is.
- It will take 1 – 3 passages to remove the wax from the floor. For cleaning the floor's edges, use the Maroon edge cleaner. One Maroon Chemical Free Stripping Pad will strip about 500 m².
- Always wait until the floor has dried thoroughly before applying a new protection layer or wax.

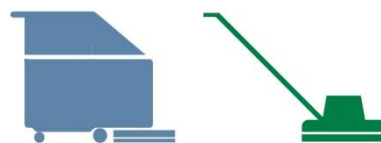

Instructions for dry use of the Maroon Chemical Free Stripping Pad

1. Place the Maroon Chemical Free Stripping pad on the pad holder. We recommend using an old pad as an 'in-between' pad, as the Maroon Chemical Free Stripping Pad is very thin.
2. Make your chosen number of passages across the floor and keep in the meantime a keen eye on the pad, as it might have to be turned over if it fills up. The Maroon Chemical Free Stripping Pad can be used on both sides and should - after use - be rinsed under a running tap.
3. Use a vacuum cleaner to thoroughly clean the floor. It is important that the vacuum cleaner has been fitted with a filter for particulate matter. Next, the floor should be mopped with a damp mop.
4. When the floor, after having been mopped, has dried again, a protection layer or wax can be applied. As the floor has hardly been in touch with water, there will only be a short waiting time before you can apply wax or protection layer.

Instructions for using the Maroon Chemical Free Stripping Pad with water

1. Place the Maroon Chemical Free Stripping pad on the pad holder. We recommend using an old pad as an 'in-between' pad, as the Maroon Chemical Free Stripping Pad is very thin.
2. Make sure that, before you get started, there is sufficient water on the floor, either by filling the machine's water tank or by emptying a bucket of water across the floor.
3. Start scrubbing the floor and make your chosen number of passages, not more than 3. If the pad fills up, you can either turn it over or rinse it under a running tap.
4. After finishing stripping, the floor should be dried thoroughly using a wet vacuum or an automatic scrubber.
5. We recommend mopping the floor afterwards with a damp mop. This will ensure that the floor surface is really clean so that a new wax layer will bond properly.
6. When the floor is dry, a new protection layer or wax can be applied. This layer will dry faster than usual, as the floor has only once been wetted with water.